



Standard Features

- ▲ Power indicator light
- ▲ Audible security alarm
- ▲ Reset and bypass operation
- ▲ Plug-in 12 VAC transformer
- ▲ Magnetic switch
- ▲ Complete hardware and instructions

Options and Accessories

- ▲ Digital timer
- ▲ Durable acrylic bumper guards
- WanderGuard remote annunciators
 - Wired and wireless models
- ▲ Wireless transmitters and repeaters
- ▲ Arial wireless communication system

Specifications

- ▲ Case dimensions: 10" x 2.5" x 1.5"
- ▲ Electrical requirements: 120 VAC
- ▲ Audible alarm: 90 decibels at 36"

Catch-All™ Non-Selective Door Alarms Model 13052 and 13062

Catch-All non-selective door alarms alert staff whenever an unauthorized person opens a Catch-All-monitored door. Catch-All door alarms are easy to install and provide an economical solution for monitoring doors where complete traffic control is desired. They are often used at remote door locations that are not clearly visible or accessible by staff. Catch-All door alarms can also be integrated with WanderGuard® wired and wireless remote annunciators and the Arial® wireless communication system for remote alarm notification and paging.

Catch-All door alarms can only be reset at the door, and provide a secured 15-second bypass mode for authorized staff. This "pass-through delay" allows personnel to disarm the system for 15 seconds before opening the monitored door. The system will automatically reset if the door closes within that time. If the door remains open longer than 15 seconds, the alarm will sound, requiring a manual reset.

Reset/Bypass Model Options

Model 13052 Digital Keypad Reset: Alarm is reset on the keypad with a 3-digit code.

Model 13062 Digital Keypad Reset and keyed On/Off function: Alarm is reset on the keypad with a 3-digit code. A key can be used to turn the system on or off.

Model 13072 Optional Remote Push-button Reset: Normally installed on the opposite side of the wall from where a Catch-All monitor is placed, in a location where residents and unauthorized staff will not generally have access. It gives a 15-second pass-through delay and allows the alarm to be reset from a remote location.

STANLEY[®]

Healthcare Solutions


Toll-Free: 800-824-4478

Office: 402-475-4002

Fax: 402-475-4281

Web: www.stanleyhealthcare.com

Single Door Application Sample wired system

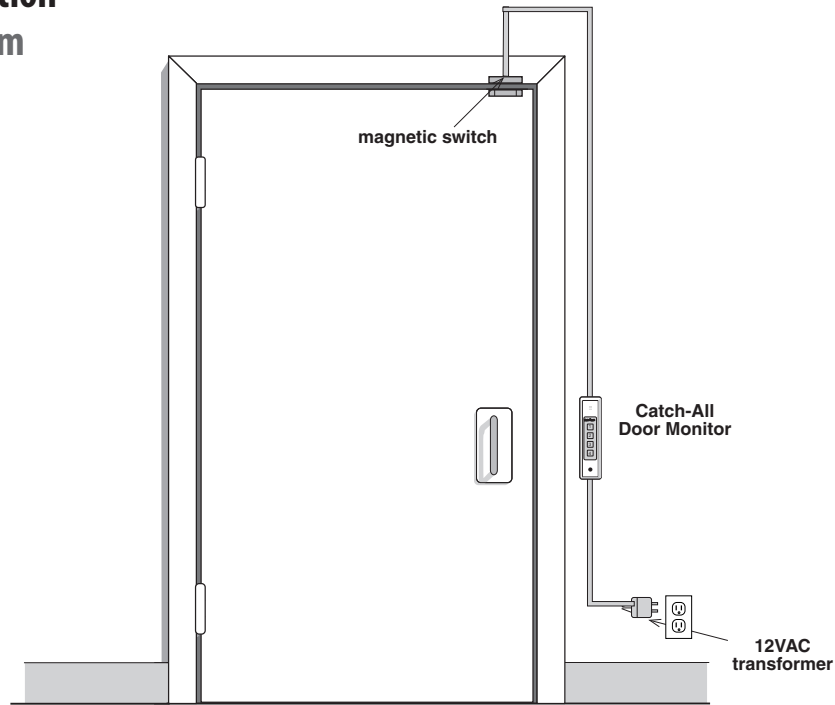

Double Door Application Sample wireless system

