



OUR GOAL

To standardize the resident safety systems across a platform of similar building construction

CUSTOMER PROFILE

Number of Properties: 20 – 30 per year

Level of Care: Assisted Living

Location: Nationwide

Property Description: Single Building 84 Unit Assisted Living

SCOPE OF PROJECT

Wandering and Emergency Call Systems for Assisted Living Communities located throughout the United States and Canada with an average size of 84 apartments

CHALLENGES

1. Existing Communities will require a retrofit installation as current resident safety systems become obsolete
2. Technology in use today will vary from building to building and will require the ability to integrate existing and future wandering systems
3. Integration to existing wireless telephone technology will be required in most locations
4. Aesthetic appearance is important and installation standards must be consistent across all properties

STANLEY SOLUTION


1. Arial® Wireless Call System acts as hub of all resident safety systems
2. Pull-cords installed in all resident bathrooms
3. Pendants provided for all residents with coverage throughout the community
4. Locaters installed throughout interior and exterior of building to provide location with the paging of resident pendant calls.
5. WanderGuard® ID Departure Alert System installed on main entrance
6. Magnetic Locks installed on all exterior doors
7. Door transmitters installed on all exterior doors to alert staff at night from 10 PM to 6 AM
8. Integration with existing staff phones used as primary communication devices

PRICE RANGE

\$45k - \$65k



84 Unit Assisted Living
Security System Configuration

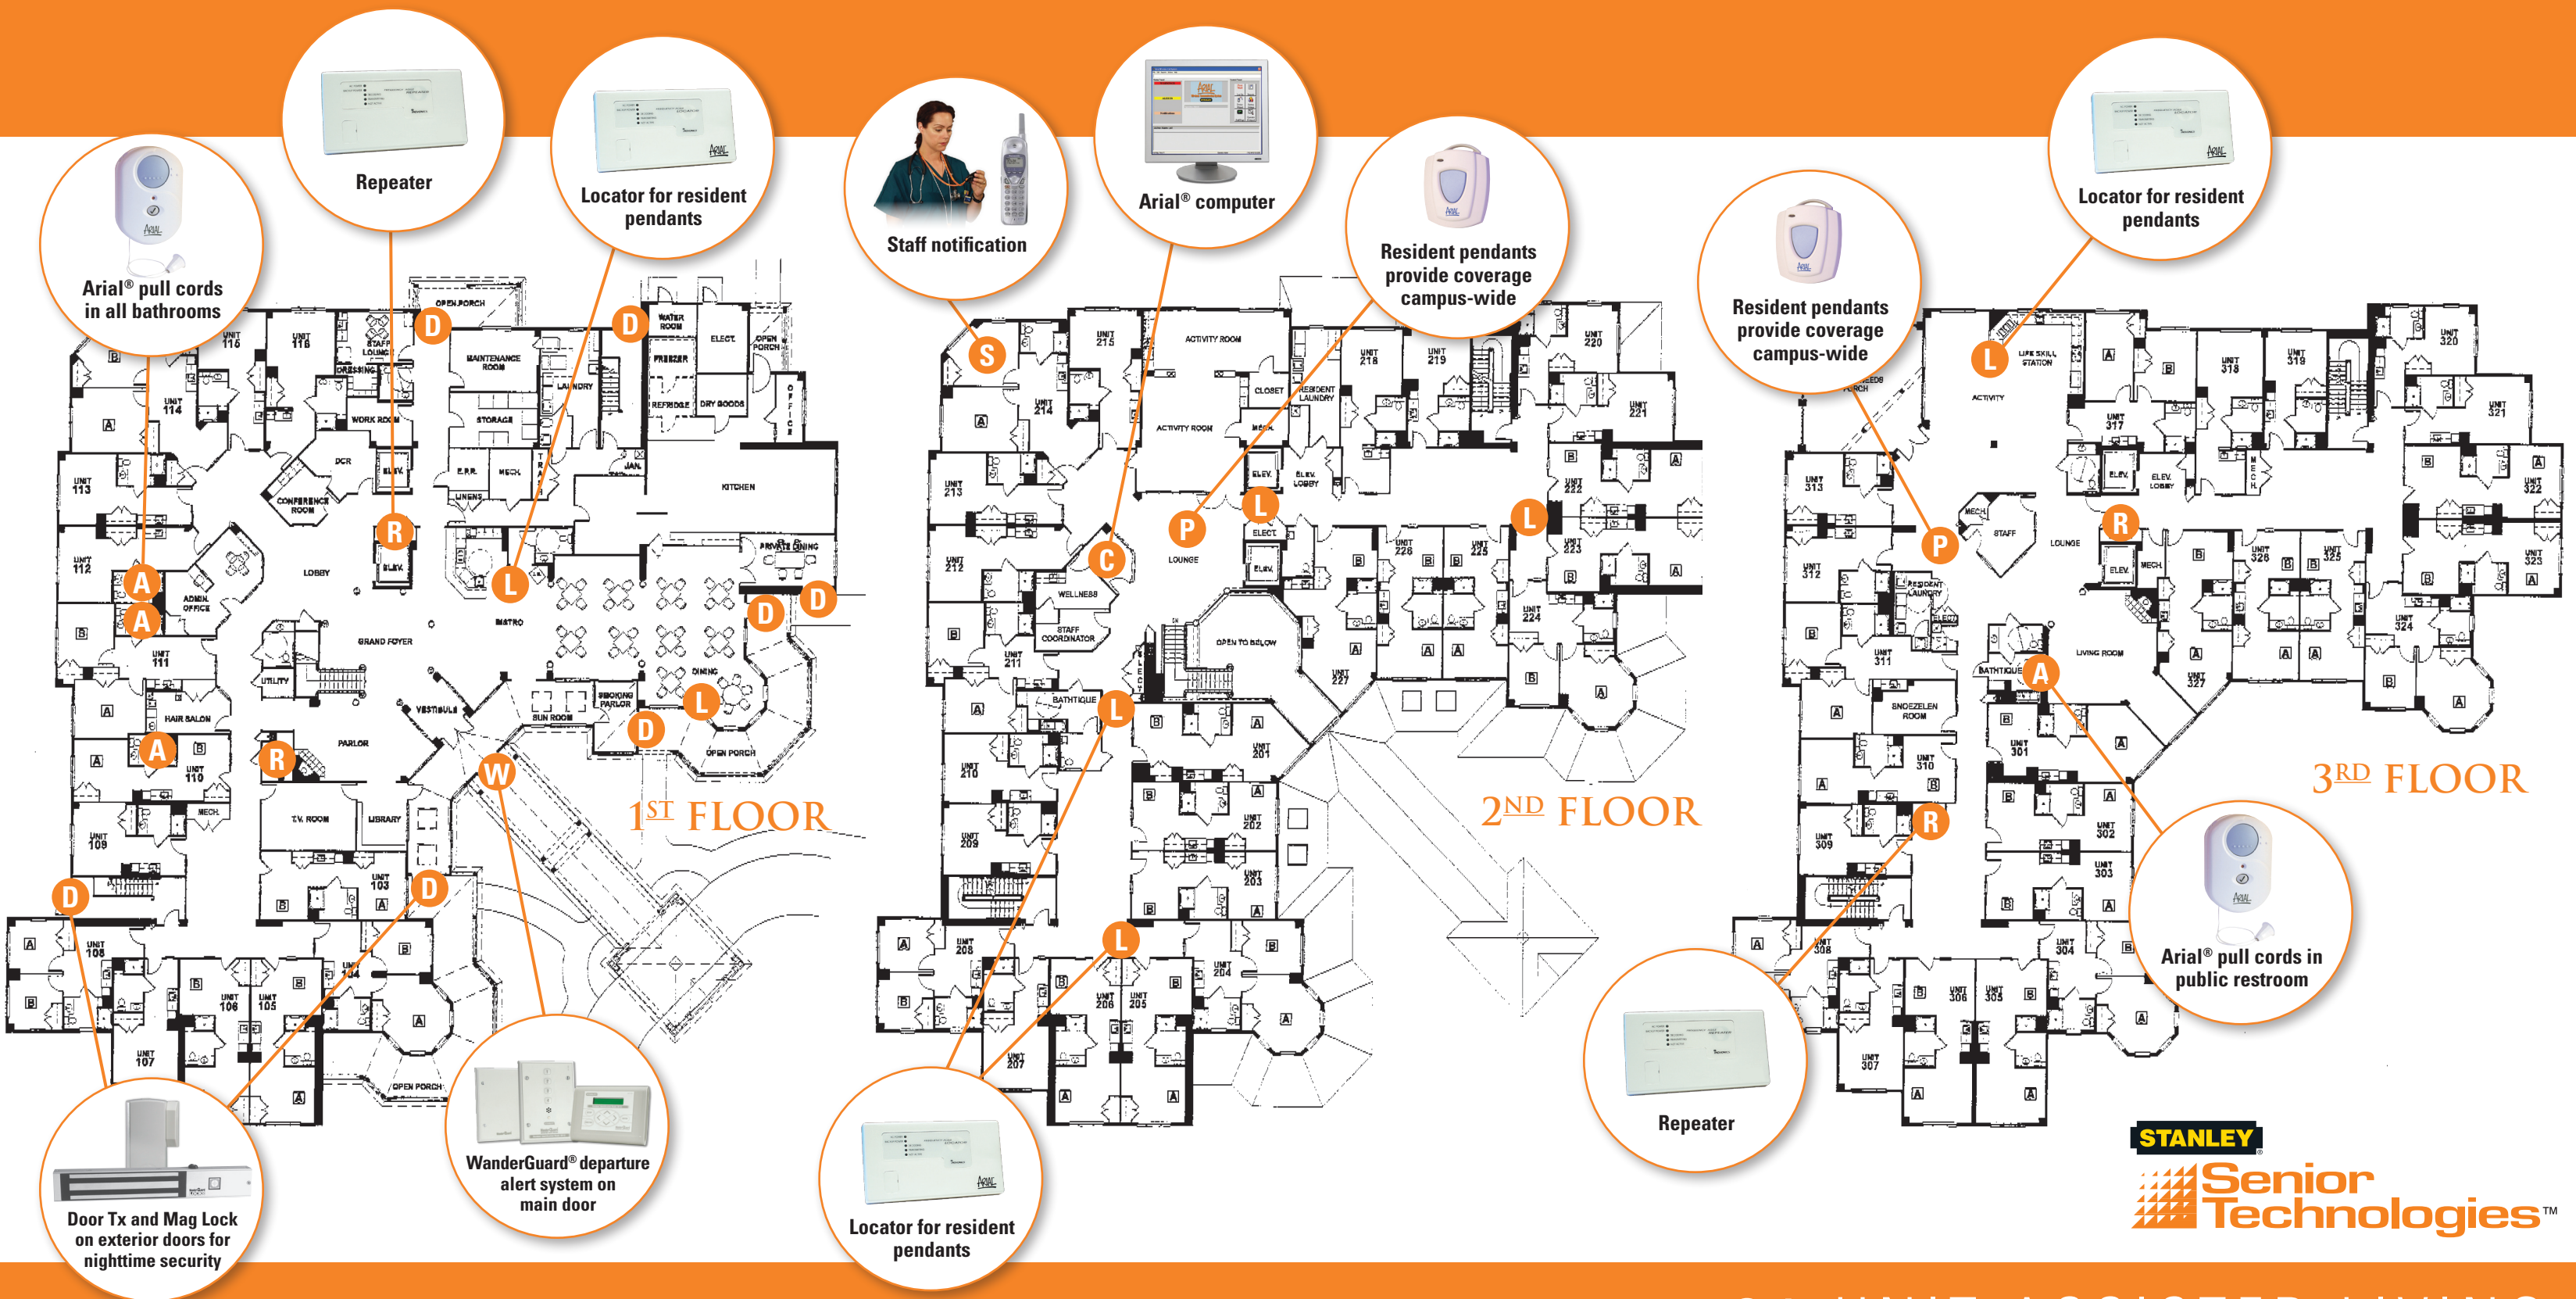

84-UNIT ASSISTED LIVING