


Arial®

Wireless Communication System

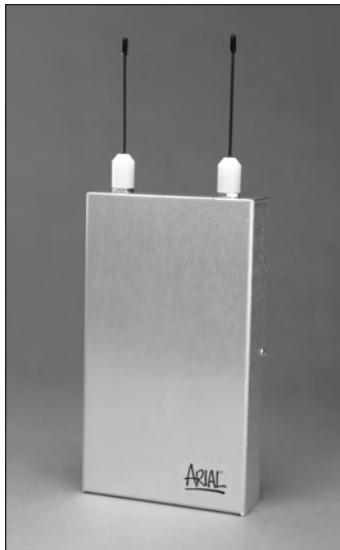

Wireless Receiver

The Aerial Wireless Receiver picks up signals from portable pendant transmitters, fixed transmitters and other sources, including smoke detectors and passive infrared detectors (PIR). It then translates those signals into data for the central monitoring station.

The wall-mounted, wireless receiver is powered by an AC adapter (included) that plugs into any standard electrical outlet, or into the battery backup supplied with the central monitoring station.

The wireless receiver connects to the central monitoring station with a 9-pin cable through a serial port.

Standard Features

- ▲ **Receives signals from:**
 - portable transmitters
 - fixed transmitters
 - smoke detectors
 - PIR sensors
- ▲ **Battery backup**

Specifications

- ▲ **Power:** 12 V DC wall transformer
- ▲ **Frequency:** 900 MHz spread spectrum
- ▲ **Bandwidth:** 100 KHz
- ▲ **Antennas:** two - 3.5" diversity antennas
- ▲ **Dimensions:** 3.9" x 6.9" x 1.2"
- ▲ **Weight:** 6.9 oz



Toll-Free: 800-824-4494

Office: 402-475-4002

Fax: 402-475-4281

Website: www.seniortechnologies.com